

# NEC

# DSX

## DSX SIP Setup

---

April 22, 2011

Issue 1.04

**©Copyright 2011**

**NEC Corporation of America  
6535 N. State Highway 161  
Irving, TX 75039-2402**

Communications Technology Group

Revision History		
Issue	Date	Revisions
1.02	1/18/11	<ul style="list-style-type: none"> <li>• Added the requirement to program the DSX router's WAN IP address in 1104-09.</li> <li>• Removed the requirement to customize DTMF for profile 4.</li> <li>• Added the application reset requirement.</li> </ul>
1.03	1/19/11	<ul style="list-style-type: none"> <li>• Removed a reference to Profile 3 on page 4. DSX SIP uses Profile 4.</li> </ul>
1.04	4/22/11	<ul style="list-style-type: none"> <li>• Updated required software level, expanded RTP port forwarding range, and added System Administrator screen shots.</li> <li>• Removed requirement for 1104-09.</li> </ul>

**Contents**

1 Overview..... 4

2 DSX SIP Setup ..... 4

3 System Router Setup..... 4

3.1 NAT and SIP..... 4

3.2 Port Forwarding ..... 4

4 DSX Setup ..... 5

4.1 Software Level ..... 5

4.2 Assign SIP Lines..... 5

4.3 Select the SIP Trunk Provider Type ..... 6

4.4 Set Up the SIP Trunk Registration..... 6

4.5 Codec Setup ..... 7

4.6 Assign Phone Numbers to your SIP Lines..... 7

4.7 Reset the System Application..... 8

**Tables**

Table 1: What You Need To Know in the Remote DSX..... 4

**1 Overview**

You can link two DSX systems together by using an unused IP extension in a remote DSX as the SIP service provider for a SIP Trunk in a local DSX. This sets up a VoIP tie-line emulation between two IP-equipped DSX systems. Press a DSX SIP line key in a local DSX system and dial any destination in the remote DSX. You can dial remote system extensions and Department Groups, use outside lines, and log into the remote system's voice mail.

- To place a call **to** the remote DSX **from** the local, a local user presses the SIP Trunk line key and dials an extension or other valid destination in the remote.
- To place a call **from** the remote DSX back **to** the local system, a remote user places an Intercom call to the IP extension in their own system that is the provider for the SIP Trunk in the local system. The SIP Trunk line key in the local system will ring.

The SIP Trunk in the local system can be set up as a Loop Start line or DID Wink Start line. If set as a DID, the SIP Trunk will route to a local destination based on the digits the caller dials and the settings in the DID Translation Table. DID support is now included in the DSX-40.

Note: DSX SIP Trunks do not currently support fax.

**2 DSX SIP Setup**

To set up the SIP Trunk link between two DSX systems, you need some information about the remote system.

**Table 1: What You Need To Know in the Remote DSX**

Option	Description
WAN IP Address	You have to know the WAN IP address of the router to which the remote DSX is connected.
VoIP Extension Username and Password	An unused IP extension in the remote DSX will act as the provider for the SIP trunk in the local DSX. This extension must be unused, have a valid username and password, and be set to use Profile 4.
<p style="text-align: center;"><b>Important Note on IP Extension Numbering</b></p> <p>When setting up DSX SIP between two systems, the IP extensions cannot overlap. For example, if the local DSX system has IP extensions 401-408, the remote system IP extensions <b>must be</b> at 409 or higher. You have to skip IP extensions 401-408 in the remote system. IP extensions 401-408 in the remote system <b>must</b> remain unused.</p>	

**3 System Router Setup**

**3.1 NAT and SIP**

In the router to which each DSX is connected, enable NAT and disable all special SIP management features (such as SIP ALG).

**3.2 Port Forwarding**

In the router to which each DSX is connected, forward UDP ports 5060 and 1024 through 1215 to the DSX system's IP address.

**4 DSX Setup**

**4.1 Software Level**

3.31.96 or higher.

**4.2 Assign SIP Lines**

IP Line Assignment (1231/1232/1233)

Line	Name	Phone Number	Registered	Provider	Fax/Data	Description	Username	Password
1				None ▼	<input type="checkbox"/>			
2				None ▼	<input type="checkbox"/>			
3				None ▼	<input type="checkbox"/>			
4				None ▼	<input type="checkbox"/>			
5				None ▼	<input type="checkbox"/>			
6				None ▼	<input type="checkbox"/>			
7				None ▼	<input type="checkbox"/>			
8				None ▼	<input type="checkbox"/>			

**1231-01: IP Lines** [SYSTEM: PORTS: IP LINES: IP LINE ASSIGNMENT]

The first DSX SIP line is the first line beyond the last assigned line. Each IP line uses an IP resource (licensed VoIP port) in DSX. The maximum number of VoIP licenses is 8 in DSX-40 and 16 in DSX-80/160.

Example with DSX-40:

- The first IP line in a DSX-40 without a COIU expansion card is line 5. Available SIP line numbers are 5-12.
- With the COIU expansion card installed, the first SIP line is line 9. Available IP line numbers are 9-16.
- DSX-40 supports a maximum of 8 VoIP licenses. When the total number of licenses are in use, only Peer-to-Peer calls are available.

Example with DSX-80/160:

- The first IP line in a DSX-80/160 with a single 8COIU card is line 9. Available IP lines are 9-17.
- The last line number in DSX-80/160 is 64. In a system with an 8COIU and two T1/PRI cards, this will limit the available number of IP lines.
- DSX-80/160 supports a maximum of 16 VoIP licenses. When the total number of licenses are in use, only Peer-to-Peer calls are available.

**1232-01: IP Line Provider Number** [SYSTEM: PORTS: IP LINES: IP LINE ASSIGNMENT]

Assign each IP line in DSX to a provider number (1 or 2). DSX supports up to two providers simultaneously.

Example: If the remote DSX is your only SIP trunk provider, assign all the IP lines designated in 1231-01 to provider 1.

**1232-02: IP Line Username** [SYSTEM: PORTS: IP LINES: IP LINE ASSIGNMENT]

For each DSX SIP trunk, enter the username. This is the extension number of an unused IP extension in the remote DSX that will be the provider for the DSX SIP trunk in the local system.

**1232-03: IP Line Password** [SYSTEM: PORTS: IP LINES: IP LINE ASSIGNMENT]

For each DSX SIP trunk, enter the password. This is the password for the VoIP extension in the remote DSX that will be the provider for the DSX SIP trunk in the local system.

**2106-01: VoIP Profile** [STATION: CONFIG: SETUP, VOIP]

For the VoIP extension in the remote DSX used as the provider for the local DSX, set **2106-01: VoIP Profile** to Profile 4.

**4.3 Select the SIP Trunk Provider Type**

Provider 1 IP Service (1831) / IP Line Registration (1832)

Service Provider	Generic Sip	Description	
Server Address		Proxy Address	
Registration Type	None	User	
User		Password	
Profile	4	Name	SIP Trunk
SIP TOS	0	RTP TOS	0

**1831-01: Service Number** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2)]

Select the provider number you want to set up. This selection corresponds to the provider number you assigned to the SIP lines in **1232-01**.

Example: If the remote DSX is your only DSX SIP trunk provider, and you have chosen provider 1 in **1232-01**, select provider 1 for this option also.

**1831-02: Provider Type** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): SERVICE PROVIDER]

Dial 02 to choose **DSX SIP** as the type for the provider selected in **1831-01**.

**1831-03: Provider Name** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): DESCRIPTION]

The provider name is an optional 18-character entry that describes the provider. Enter any name you like – the entry does not affect provider setup or registration.

**1831-04: Profile** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): PROFILE]

Select the VoIP profile that the system will use when connecting to the DSX SIP trunk provider. **Choose profile 4.**

**4.4 Set Up the SIP Trunk Registration**

**1832-01: Provider IP Registration** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): SERVER ADDRESS]

Select the provider number you want to set up (see **1831-01**) and enter the WAN IP address of the remote DSX router.

**1832-02: Registration Type** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): REGISTRATION TYPE]

Choose the IP line registration type (**02: Per Line**).

**1832-03: Account Username** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): USER]

**1832-04: Account Password** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): PASSWORD]

**1832-05: Proxy** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): PROXY ADDRESS]

**1832-06: SIP Type or Service (ToS)** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): SIP TOS]

**1832-07: RTP Type of Service (ToS)** [SYSTEM: VOIP: PROVIDERS: PROVIDER (1 OR 2): RTP TOS]

These options are not used with DSX SIP trunks.

**4.5 Codec Setup**

Profile Name (1811)

Codecs (1812)

Priority	Codec	Frame Size	Jitter Minimum	Jitter Standard	Jitter Maximum	Silence Compression
1	G.729	40ms	40	80	160	<input type="checkbox"/>
2	G.711	40ms	40	80	160	<input type="checkbox"/>
3	G.722	40ms	40	80	160	<input type="checkbox"/>
4	G.726*	40ms	40	80	160	<input type="checkbox"/>
5	G.723*	60ms	60	120	240	<input type="checkbox"/>
6	ILBC*	30ms	30	60	120	<input type="checkbox"/>

\* Additional Codecs provided for 3rd party SIP phones

Settings (1813)

Jitter Mode  Silence Threshold  Idle Noise  Tx Gain  Rx Gain

Echo Canceller (1814)

Echo Cancel Enable Echo Tail   NLP Enable NLP Noise Mode  Auto Gain Control

Payload Types (1815)

DTMF Type  DTMF Payload  (96 - 127) ILBC Payload  (96 - 127) G.726 Payload  (96 - 127)

**1812: Codecs** [SYSTEM: VOIP: PROFILE 4: CODECS]  
 For DSX SIP Trunks, leave Profile 4 at default.

**4.6 Assign Phone Numbers to your SIP Lines**


Type (3101)

Type  Name   DTMF Dialing  PBX Line

Phone Number

**3101-07: Telephone Number** [LINES: CONFIG: SETUP: TYPE: PHONE NUMBER]  
 For each of your SIP lines, enter the number of the unused IP extension in the remote DSX to which the line is registered. This is the same as the entry you made in **1232-02: IP Line Username** [SYSTEM: PORTS: IP LINES: IP LINE ASSIGNMENT].

#### 4.7 Reset the System Application

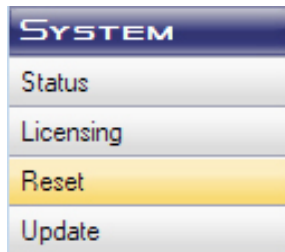

*9001: System Reset* [SYSTEM: RESET]

Using telephone programming or the System Administrator, reset both DSX systems. **Do not** reset by turning the power off and on or by pressing the red Reset Button.